

RADIO UTILITY

Bande marittime hf

Frequenza	Usò	Modo	Dettagli
4000 - 4063	SHIP	USB	INTERSHIP SIMPLEX / CROSS BAND WITH 8 MHZ DUPLEX WITH COAST ON 4438 - 4650 / SUPPL. FOR DUPLEX ON USB CH. 401-429
4063.3 - 4064.8	SHIP	DATA	6 SHIP OR BUOY CHANNELS (0.3 KHZ) FOR OCEANOGRAPHIC DATA TRANSMISSIONS
4065 - 4143	SHIP	USB	SHIP CH. 401 - 427 DUPLEX WITH COAST STATIONS ON 4357 - 4435
4125	BOTH	USB	CHANNEL 421 - SIMPLEX. SUPPLEMENTS 2182 FOR DISTRESS AND SAFETY
4146	BOTH	USB	SIMPLEX AND CROSSBAND FREQ. WX & NAV WARNING FREQ. MAY BE USED WITH CH. 428/429 (4351/4354) FOR DUPLEX
4149	BOTH	USB	SIMPLEX AND CROSSBAND FREQ. WX & NAV WARNING FREQ. MAY BE USED WITH CH. 428/429 (4351/4354) FOR DUPLEX
4154 - 4170	SHIP	MISC	5 CHANNELS SPACED 4 KHZ APART FOR FAX, DATA AND OTHER SPECIAL TRANSMISSIONS
4172.5 - 4181.5	SHIP	SITOR-A	4 MHZ SHIP RTTY BAND - PAIRED WITH COAST STATIONS OPERATING ON 4210.5 - 4219. MAY ALSO BE USED FOR CW WORKING.
4177.05.00	BOTH	RTTY	SIMPLEX (CH. 411) DISTRESS/SAFETY TFC ONLY
4182 - 4186.5	SHIP	CW	10 CALLING CHANNELS .5 KHZ APART
4187 - 4202	SHIP	CW	SHIP CW WORKING CHANNELS - .5 KHZ APART
4202.5 - 4207	SHIP	SITOR/C	W 10 NON-PAIRED SITOR-A TRANSMITTING CHANNELS SPACED .5 KHZ APART. ALSO USED FOR SHIP CW WORKING FREQS
4207.5 - 4209	SHIP	DSC	4 SHIP CHANNELS .5 KHZ APART FOR DIGITAL SELECTIVE CALLING (DSC). 4207.5 MAY BE USED BY COAST FOR DISTRESS/SAFETY
4209.05.00	COAS	T SITOR-B	NAVTEX BROADCASTS
4210	COAS	T SITOR-B	MARINE SAFETY INFO BROADCASTS
4210.5 - 4219	COAS	T SITOR-A	4 MHZ COAST RTTY BAND - .5 KHZ APART
4219.5 - 4220.5	COAS	T DSC	3 COAST STATION DIGITAL SELECTIVE CLG CHAN'S
4221 - 4351	COAS	T CW	MARITIME CW COAST STATIONS

4351 - 4354	COAS	T USB	CH. 428 & 429 - PAIRED WITH 4146 AND 4149
4357 - 4435	COAS	T USB	COAST STATION USB DUPLEX BAND
6200 - 6525	SHIP	USB	6 MHZ SHIP USB BAND - 8 CHANNELS PAIRED WITH COAST STATIONS ON 6501 - 6522
	6210.04.00 COAS	T USB	LIMITED COASTAL STATIONS - SIMPLEX
	6212.04.00 BOTH	USB	WGK ST. LOUIS, INLAND WATERWAY SIMPLEX
	6213.05.00 BOTH	USB	LIMITED COASTAL STATIONS
	6215 SHIP	USB	CHANNEL 606 - CALLING/SAFETY/DISTRESS
6224 - 6230	BOTH	USB	SIMPLEX LIMITED COASTAL STATIONS
6235 - 6259	SHP	VARIOUS	7 SHIP CHANNELS, 4 KHZ WIDE, FOR FAX, DATA AND OTHER SPECIAL TRANSMISSIONS
6261.3 - 6262.5	SHIP	DATA	5 CHANNELS, SPACED .3 KHZ APART, FOR SHIP OR BUOY DATA TRANSMISSIONS
6263 - 6275.5	SHIP	SITOR-A	6 MHZ SHIP RTTY BAND
	6268 BOTH	RTTY	SIMPLEX (CH. 611) FOR SAFETY/DISTRESS ONLY
6277 - 6280.5	SHIP	CW	CW CALLING CHANNELS (10, .5 KHZ APART)
6281 - 6284.5	SHIP	RTTY/CW	8 SITOR-A CHANNELS PAIRED WITH 6327 - 6330.5 ALSO USED FOR CW WORKING FREQS
6285 - 6300	SHIP	CW	SHIP CW WORKING CHANNELS (.5 KHZ APART)
6300.5 - 6311.5	SHIP	SITOR-A	23 NON-PAIRED SHIP TRANSMIT CHANNELS MAY ALSO BE USED FOR CW
6312 - 6313.5	SHIP	DSC	4 CHANNELS (.5 KHZ) FOR DSC
			6312.0 MAY ALSO BE USED BY COAST STATIONS FOR DISTRESS/SAFETY ONLY
	6314 COAS	T SITOR-B	INTERNATIONAL MSI BROADCASTS
6314.5 - 6330.5	COAS	T SITOR-A	6 MHZ COAST RTTY BAND
6331 - 6332	COAS	T DSC	3 CHANNELS (.5 KHZ) FOR DSC
6332.5 - 6501	COAS	T CW	6 MHZ COAST CW BAND
6501 - 6522	COAS	T USB	6 MHZ COAST USB BAND
8195 - 8288	SHIP	USB	8 MHZ SHIP USB BAND PAIRED WITH 8719 - 8812 KHZ
	8281.02.00 BOTH	USB	LIMITED COASTAL STATIONS - SIMPLEX
	8284.04.00 BOTH	USB	LIMITED COASTAL STATIONS - SIMPLEX
8291 - 8297	BOTH	USB	LIMITED COASTAL STATIONS - SIMPLEX
8302 - 8338	SHIP	VARIOUS	10 SHIP CHANNELS (4 KHZ) FOR FAX, DATA, AND OTHER SPECIAL TRANSMISSIONS

8340.3 - 8341.5	SHIP	DATA	5 SHIP/BUOY CHANNELS FOR DATA TRANSMISSIONS
8342 - 8365.5	SHIP	CW	SHIP CW WORKING FREQS
8366 - 8370.5	SHIP	CW	SHIP CALLING FREQS
8371 - 9376	SHIP	CW	SHIP CW WORKING FREQS
8376.05.00	BOTH	RTTY	CH. 801 FOR DISTRESS/SAFETY ONLY (SIMPLEX)
8377 - 8396	SHIP	SITOR-A	8 MHZ SHIP RTTY BAND
8396.5 - 8414	SHIP	SITOR-A	4 SHIP SITOR-A TRANSMITTING CHANNELS MAY ALSO BE USED FOR CW
8414.5 - 8416	SHIP	DSC	SHIP DSC - 8414.5 MAY ALSO BE USED BY COAST STATIONS FOR DISTRESS/SAFETY ONLY
8416.05.00	COAS	T SITOR-B	INTERNATIONAL MSI BROADCASTS
8417 - 8436	COAS	T SITOR-A	8 MHZ COAST RTTY BAND
8436.5 - 8437.5	COAS	T DSC	COAST DSC
8438 - 8707	COAS	T CW	8 MHZ COAST CW BAND
8707 - 8716	BOTH	USB	SIMPLEX OR DUPLEX (CH. 834 - 837) IF DUPLEX, USES 8812
8719 - 8812	COAS	T USB	8 MHZ COAST USB BAND
12230 - 12350	SHIP	USB	12 MHZ SHIP USB FREQS
12290	SHIP	USB	CALLING/DISTRESS/SAFETY (CH. 1221)
12353 - 12365	BOTH	USB	5 SIMPLEX CHANNELS - ALSO USED FOR CROSSBAND
12370 - 12418	SHIP	VARIOUS	13 CHANNELS (4 KHZ) FOR FAX, DATA, SPECIAL)
12420.3 - 12421	.5 SHIP	DATA	5 SHIP/BUOY CHANNELS FOR DATA TRANSMISSIONS
12421	BOTH	USB	LIMITED COASTAL (SIMPLEX)
12422 - 12476.5	SHIP	CW	SHIP CW WORKING FREQS
12477 - 12549.5	SHIP	SITOR-A	12 MHZ SHIP RTTY BAND
12520	BOTH	RTTY	SIMPLEX - DISTRESS/SAFETY ONLY
12550 - 12554.5	SHIP	CW	10 SHIP CW CALLING CHANNELS
12555 - 12559.5	SHIP	SITOR-A	DUPLEX WITH 12652 - 12656.6. ALSO CW
12560 - 12576.5	SHIP	SITOR-A	34 NON-PAIRED SHIP SITOR TRANSMITTING CHANNELS. ALSO AVAILABLE FOR CW WORKING
12577 - 12578.5	SHIP	DSC	4 SHIP DSC CHANNELS. 12577 ALSO MAY BE USED BY COAST STATIONS FOR DISTRESS/SAFETY ONLY
12579	COAS	T SITOR-B	INTERNATIONAL MSI BROADCASTS
12579.5 - 12656	.5 COAS	T SITOR-A	12 MHZ COAST RTTY BAND
12657 -- 12658	COAS	T DSC	3 COAST DSC CHANNELS
12658.5 - 13077	COAS	T CW	12 MHZ COAST CW BAND

13077 - 13197	COAS	T USB	12/13 MHZ COAST USB BAND
16360 - 16525	SHIP	USB	16 MHZ SHIP USB DUPLEX BAND
	16420 SHIP	USB	SHIP CALLING/DISTRESS/SAFETY (CH. 1621)
16528 - 16546	BOTH	USB	7 SIMPLEX CHANNELS. ALSO CROSS BAND.
16551 - 16615	SHIP	VARIOUS	17 CHANNELS (4 KHZ) FOR FAX, DATA, ETC.
16565 - 16592	BOTH	USB	SIMPLEX - LIMITED COASTAL STATIONS
16617.3 - 16618	.5 SHIP	DATA	5 SHIP/BUOY CHANNELS FOR DATA
16619 - 16683	SHIP	CW	16 MHZ SHIP CW WORKING FREQS
16683.5 - 16733	.5 SHIP	SITOR-A	16 MHZ SHIP RTTY FREQS
	16695 BOTH	RTTY	SIMPLEX FOR DISTRESS/SAFETY
16734 - 16738.5	SHIP	CW	SHIP CW CALLING FREQS
16739 - 16784.5	SHIP	SITOR-A	ADDITIONAL SHIP SITOR-A DUPLEX WORKING FREQS
			ALSO AVAILABLE FOR SHIP CW WORKING
16785 - 16804	SHIP	SITOR-A	39 NON-PAIRED SHIP CHANNELS
			ALSO AVAILABLE FOR CW WORKING
16804.5 - 16806	SHIP	DSC	SHIP DSC CHANNELS. 16804.5 ALSO AVAILABLE
			FOR COAST STATIONS FOR DISTRESS/SAFETY ONLY
16806.5	COAS	T SITOR-B	INTERNATIONAL MSI BROADCASTS
16807 - 16902.5	COAS	T SITOR-A	16 MHZ COAST RTTY BAND
16903 - 16904	COAS	T DSC	3 COAST DSC CHANNELS
16904.5 - 17242	COAS	T CW	16/17 MHZ COAST CW BAND
17242 - 17407	COAS	T USB	16/17 MHZ COAST USB BAND
18780 - 18822	SHIP	USB	15 SHIP USB CHANNELS PAIRED WITH
			19755 - 19797
18825 - 18843	SHIP	USB	7 SIMPLEX/CROSS-BAND CHANNELS
18848 - 18868	SHIP	VARIOUS	6 CHANNELS (4 KHZ) FOR FAX, DATA, ETC.
18870.5 - 18892	.5 SHIP	SITOR-A	SHIP RTTY BAND - DUPLEX WITH 19681 - 19703
18893 - 18898	SHIP	SITOR-A	11 NON-PAIRED SHIP TRANSMITTING CHANNELS
18898.5 - 18899	.5 SHIP	DSC	3 SHIP DSC CHANNELS
19680.5	COAS	T SITOR-B	INTERNATIONAL MSI BROADCASTS
19681 - 19703	COAS	T RTTY	COAST RTTY DUPLEX BAND PAIRED WITH
			18870.5 - 18892.5
19703.5 - 19704	.5 COAS	T DSC	3 COAST DSC CHANNELS
19705 - 19755	COAS	T CW	COAST CW STATIONS
19755 - 19797	COAS	T USB	COAST USB DUPLEX, PAIRED WITH 18780 - 18822

22000 - 22156	SHIP	USB	22 MHZ SHIP USB FREQS
22098 - 22136	USB	BOTH	SIMPLEX LIMITED COASTAL STATIONS
22159 - 22177	BOTH	USB	7 SIMPLEX/CROSS BAND FREQS
22182 - 22238	SHIP	VARIOUS	15 CHANNELS FOR FAX, DATA, ETC.
22240.3 - 22241	.5 SHIP	DATA	5 SHIP/BUOY DATA FREQS
22242 - 22279	SHIP	CW	22 MHZ SHIP CW WORKING FREQS
22279.5 - 22284	SHIP	CW	22 MHZ SHIP CW CALLING FREQS
22284.5 - 22351	.5 SHIP	SITOR-A	22 MHZ SHIP DUPLEX RTTY FREQS
22352 - 22374	SHIP	SITOR-A	45 NON-PAIRED SHIP SITOR-A CHANNELS MAY ALSO BE USED FOR CW WORKING
22374.5 - 22375	.5 SHIP	DSC	3 SHIP DSC CHANNELS
22376.5 - 22443	.5 COAS	T SITOR-A	22 MHZ COAST RTTY FREQS (DUPLEX)
22444 - 22445	COAS	T DSC	3 COAST DSC CHANNELS
22445.5 - 22696	COAS	T CW	22 MHZ COAST CW BAND
22696 - 22852	COAS	T USB	22 MHZ COAST USB DUPLEX